



TOOL PISTON AREA 5.385 IN. SQ.

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	AES-AS90028	ASSY. - 3-1/4" O.D. QUICK CHANGE
2		SET-3625-000	ASSY. - 3-5/8" O.D. COMPACT SETTING TOOL - ALL TEMP ITEMS 1,4,12,AND 25 NOT INCL. IN EITHER ASSY
3*	1	OOO-V569-328	O-RING -
4	1	DET-5306-074	IGNITOR ASSY. - POWER CHARGE
5*	4	OOO-V569-332	O-RING
6	1	SET-3500-042	ASSY. - BLEEDER VALVE - ITEMS 20 THRU 24
7	1	SET-3625-022	FIRING HEAD
8	1	SET-3625-026	TOP PISTON ASSY.
9*	2	OOO-V569-226	O-RING
10*	1	SET-3500-022	BRASS SHEAR SCREW, 6,000 lbs
11	1	SET-3625-023	SHEAR SLEEVE
12	1	JEC-0212-044	POWER CHARGE - ALL TEMP. - 400° F CARBOARD TUBE
		JEC-5334-104	POWER CHARGE - ALL TEMP. - 400° F METAL TUBE
13	1	SET-3625-024	TOP CYLINDER
14*	1	OOO-V569-335	O-RING
15*	1	OOO-V569-321	O-RING
16	1	SET-3625-025	BOTTOM CYLINDER
17	1	SET-3500-009	LOCK RING
18	1	SET-3625-029	BOTTOM PISTON
19	1	SET-3500-025	LOCK NUT
20	1	SET-3500-043	STEM
21	1	SET-3500-045	RETAINER NUT
22	1	SET-3500-044	SEAT
23*	1	OOO-V569-213	O-RING
24*	1	OOO-V569-012	O-RING
25	1	SET-3500-046	BLEEDER WRENCH
*		SET-3625-016	O-RING KIT - ALL TEMP. (ITEMS 3,5,9,10,14,15,23,24)
		SET-3500-047	THREAD PROTECTOR FOR FIRING HEAD
-	-	MAN-SET-005	MANUAL

Note: Replace STEM, RETAINER NUT, and Seat (items 20, 21, 22) at or before twenty runs. If visual inspection reveals damage that may lead to failure, replace parts immediately.

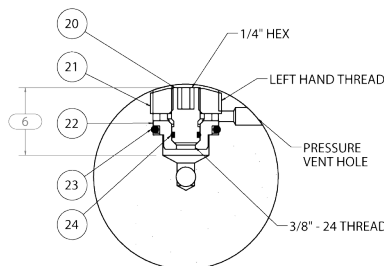

BLEEDER VALVE ASSY.
SET-3500-042

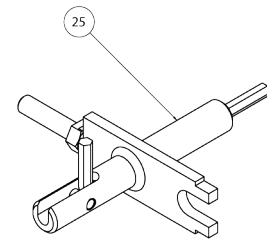

BLEEDER WRENCH
SET-3500-046